


# ACTIVESHOP®

## INSTRUCTIONS FOR USE

iWax wax warmer can 800ml

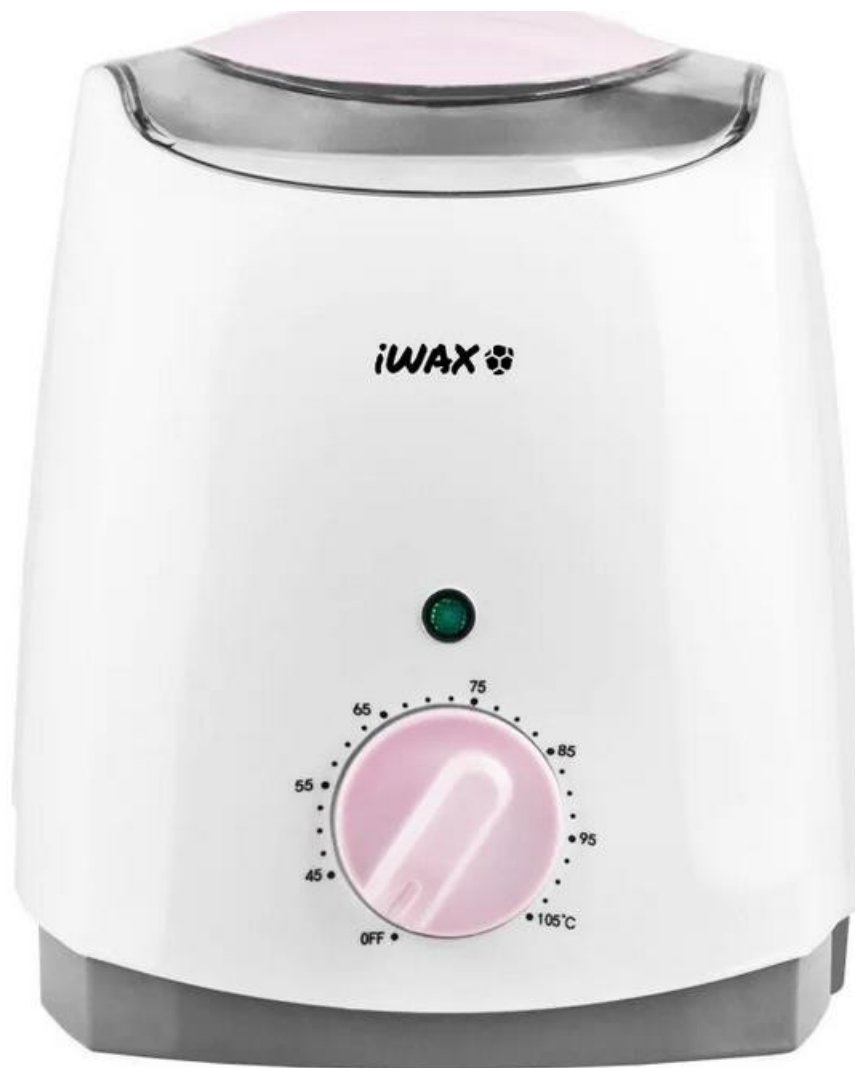

**Importer:**

ACTIVESHOP Sp. z o.o.  
Ul. Graniczna 8b, building  
DC2A 54-610 Wrocław,  
Poland  
[www.activeshop.com.pl](http://www.activeshop.com.pl)  
Rev. A/09/2024



## Technical data

Power	200W
Voltage	220-240V, 50/60Hz
Dimensions	22 x 17.5 x 20cm
Temperature range	40-105°C

## Usage:

1. Place the wax in the container and put the lid on.
2. Plug in the unit and turn the dial to set the desired temperature.
3. The average melting time of the wax is about 15 minutes. Depending on the type of wax.
4. Make sure the wax is not too hot before applying it to the skin to avoid burning.
5. Once the wax is liquid you can reduce the temperature.
6. Apply the wax with a stick to the skin along the direction of the hair.
7. Then stick on the hair removal paper.
8. Pull the hair removal paper in the opposite direction of hair growth.
9. Remove the wax residue with oil or olive oil.
10. When finished, turn the dial to "OFF" and unplug the device.

## Cleaning the device:

1. Do not use solvents or strong cleaning agents.
2. Always unplug the device before cleaning.
3. Do not soak the device in water.
4. Do not use sharp objects for cleaning.
5. You can use a special liquid to remove wax residue.

## SAFETY PRECAUTIONS

1. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. Any service and repair work must be performed only by an authorized service technician (ACTIVESHOP L t d .).
2. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
3. Immediately unplug the device from the outlet and contact the authorized service provided by ACTIVESHOP Ltd. in the following cases:
  - a) Liquid has entered the device, b) the device emits a strange odor, smoke or makes strange sounds, c) the power cord has been damaged, d) the device has been knocked over or its housing has been damaged.
4. Do not lay any objects on the cables. Do not install the device where someone may step on the power cord.
5. For safety purposes, remove the power cord from the outlet each time you finish working with the device.
6. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
7. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
8. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
9. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device, damage or even burning.

## CAUTION

1. In the event of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This device can be used by children at least 8 years old and by people with reduced physical and mental abilities and those with inexperience and lack of familiarity with the equipment, if supervision or instruction on the use of the equipment in a safe manner is provided, so that the associated risks are understood.
3. The equipment is not intended for play by children. Do not allow children to play with the equipment.
4. Do not leave the equipment unsupervised when children or persons without sufficient knowledge of the use of the equipment are near it.
5. This electrical appliance is not a toy. Improper use or contact with the electrical appliance may pose a health risk or lead to death, so keep it out of the reach of children.

## DISPOSAL OF THE DEVICE



Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Do not dispose of electrical appliances in household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with the directive

2012/19/EC on waste electrical and electronic equipment, waste electrical equipment should be collected separately, and sent to collection centers for waste electronic and electrical equipment. At the end of their useful life, as well as old appliances containing full-value recyclable components, so they should be sent for reprocessing. Therefore, they should be handed over to appropriate collection points, as well as they can be handed over to ACTIVESHOP Ltd.

## STORAGE AND TRANSPORT

The device should be transported at a temperature range of (-) 20 °C to (+) 50 °C only in its original packaging. Store the device in a well-ventilated place and a relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During the storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.