

# ACTIVESHOP<sup>®</sup>

## INSTRUCTIONS FOR USE

iWax roll wax warmer Trio 120W



**Importer:**

ACTIVESHOP Sp. z o.o.  
Ul. Graniczna 8b, building  
DC2A 54-610 Wrocław,  
Poland

[www.activeshop.com.pl](http://www.activeshop.com.pl)

Rev. A/01/2025



**Technical data:**

<b>Voltage</b>	<b>230 V</b>
<b>Frequency</b>	<b>50 Hz</b>
<b>Power</b>	<b>120 W</b>
<b>Dimension of the heater base</b>	<b>26 x 16 x 5cm</b>

**Usage:**

1. Place the wax in the container and put the lid on.
2. Plug in the device and turn on the heater base with the 0/I button. For TRIO 120W model, each heater turns on separately.



3. The average wax melting time is about 30 minutes. Depending on the type of wax.
4. When the wax has melted, turn off the heating base with the 0/I button.
5. Before applying the wax to the skin, make sure the wax is not too hot to avoid burning.
6. Apply the wax with a stick to the skin along the direction of the hair.
7. Then stick on the depilatory paper.
8. Pull the hair removal paper in the opposite direction of hair growth.
9. Remove the wax residue with oil or olive oil.
10. When the treatment is finished, turn off the heater base with the 0/I button and unplug the device.

**Cleaning the device:**

1. Do not use solvents or strong cleaning agents.
2. Always unplug the device before cleaning.
3. Do not soak the device in water.
4. Do not use sharp objects for cleaning.
5. You can use a special liquid to remove wax residue.

**Set composition:**

1. Power cord.
2. Wax warmers x3.
3. Heater base.

**SAFETY PRECAUTIONS**

1. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. All servicing and repairs must be performed only by an authorized service technician (ACTIVESHOP Ltd.).
2. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
3. Immediately unplug the device from the outlet and contact an authorized service provided by ACTIVESHOP Ltd. in the following cases:
  - a) (a) liquid has gotten into the device, (b) the device emits a strange odor, smoke or makes strange sounds, (c) the power cord has been damaged, (d) the device has been knocked over or its housing has been damaged.
4. Do not lay any objects on the cables. Do not install the device where someone may step on the power cord.
5. For safety purposes, remove the power cord from the outlet each time you finish working with the device.
6. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
7. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
8. In order to guarantee the established useful life of the device, it is recommended to maintain an interval of one minute before pressing the power button again (between switching on and off and vice versa).
9. The power supply must comply with the specifications on the nameplate. Otherwise, there is a risk of incorrect operation of the device, damage or even burning.

**CAUTION!**

1. In the event of damage to the power cord or other malfunctions, contact an authorized service center - this will avoid danger.
2. This equipment may be used by children at least 8 years of age and by persons of diminished physical and mental capabilities and persons with inexperience and lack of familiarity with the equipment, if supervision or instruction on the use of the equipment in a safe manner is provided so that the associated risks are understood.
3. The equipment is not intended for play by children. Do not allow children to play with the equipment.
4. Do not leave the appliance unattended when children or persons without sufficient knowledge of the use of the appliance are in the vicinity.
5. This electrical appliance is not a toy. Improper use of or contact with an electrical appliance may pose a health risk or lead to death, so keep it out of the reach of children.

## DISPOSAL OF THE DEVICE



Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Electrical appliances should not be thrown into household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive

2012/19/EC on waste electrical and electronic equipment, waste electrical equipment should be collected separately, and sent to collection centers for waste electronic and electrical equipment. At the end of their useful life, as well as old appliances containing full-value recyclable components, so they should be sent for reprocessing. Therefore, they should be handed over to appropriate collection points, as well as they can be handed over to ACTIVESHOP Ltd.

## STORAGE AND TRANSPORT

The device should be transported at a temperature range of (-) 20 °C to (+) 50 °C only in its original packaging. Store the device in a well-ventilated place and a relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During the storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.

