

ACTIVESHOP[®]

INSTRUCTIONS FOR USE

Ultrasonic cleaner CD-4900



Importer:

ACTIVESHOP Ltd.
8b Graniczna St., building
DC2A 54-610 Wrocław,
Poland
www.activeshop.com.pl
Rev. A/03/2024




Technical data:

Voltage	220-240V 50Hz
Power	75W
Vibration frequency	42KHz
Dimensions	23.7x22.3x10.4cm
Dimensions of the tank	17.4x9.1x4.6cm
Tank capacity	500ml
Maximum fluid level	450ml
Weight	1kg

- Disconnect the unit before filling. Do not exceed the "MAX" line to avoid overfilling.
- Not fill tank with abrasive or corrosive chemicals. Can cause leakage and consequent destruction.
- Do not use the washer if the cable or plug is damaged. If damaged, contact a service center for inspection and repair.
- Store the washer in a safe, dry and sunless place.
- The washer should never be left unattended while plugged in.
- Do not use while bathing.
- Disconnect the washer from the power source after use.
- Do not immerse the washer in water to avoid electric shock
- The water should be poured through the place on the washer indicated by the arrow.

Washer construction and accessories:

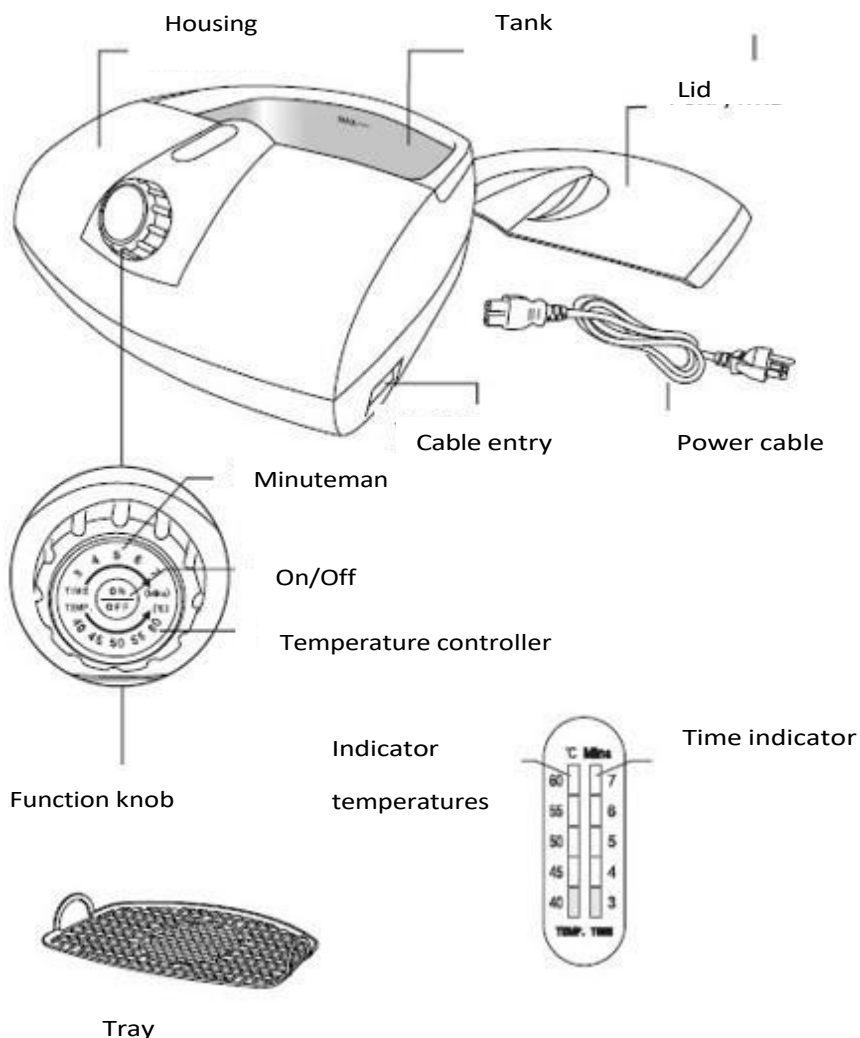

STORAGE AND HANDLING



1. When you have finished working, unplug the device from the power supply and pour out the water. Do not leave the water in the washer permanently. Leaving water or solution in the washer for a long time can damage it.
2. Do not overload the washer with continuous operation. After 3 cycles of continuous operation, leave the washer at rest for 10 minutes.
3. Take care of the outside of the washer. Wipe off any residual water or solution immediately. Use a damp towel to clean the washer. Wipe dry after washing.
4. Do not expose the device to the sun for too long. Store the washer in a dry and cool location.

DEVICE FUNCTIONS

Enabling:



Connect the device to the power supply (automatic settings of the device are 3 minute wash cycle and **40°C**). Press the "ON/OFF" button to start cleaning, when you press the "ON/OFF" button again, cleaning will stop.

Shutdown:

Hold the "ON/OFF" button for at least 3 seconds to turn off the device.

Cleaning cycles --- time settings



Turn the dial clockwise to select the desired cleaning time (3, 4, 5, 6 or 7 minutes). The time indicator will show the selected cleaning cycle. Turn the knob clockwise to adjust the time as desired.

→ 3min → 4min → 5min → 6min → 7min →

After selecting the appropriate time cycle, press the "ON/OFF" button to start cleaning. The time indicator will light up until the cleaning process is over.

If turn the knob according to z movement directions clockwise during cleaning, you will reset the selected settings.

If you want to pause the device, press the "ON/OFF" button again. The time indicator will remain on, but will not light up.

Temperature control:



Turn the knob counterclockwise to select the desired temperature (40°C, 45°C, 50°C, 55°C, 60°C). The temperature indicator will show the selected cleaning temperature. Turn the knob counterclockwise to adjust the temperature as desired.

→ 40°C → 45°C → 50°C → 55°C → 60°C →

After selecting the desired temperature, press the "ON/OFF" button so that the device begins to heat up. The temperature indicator will light up until the heating is complete.

If you turn the knob counterclockwise during heating, you reset the selected settings.

If you want to stop heating, press the "ON/OFF" button again. The temperature indicator will remain on, but will not light up.

INSTRUCTIONS FOR USE



1. Remove the lid, place the items you want to clean on the tray and insert it into the tank. Larger items can be inserted directly into the tank.



2. Fill the tank with water. The water must cover the items to be cleaned, but must not exceed the maximum liquid level.



3. Connect the device to the power supply. The device will select an automatic cycle - 3 minutes and **40°C**.



4. The time and temperature can be set manually, depending on the state in which the the item being cleaned.

It is recommended to clean one item for 3 minutes and not to increase the temperature. If you want to clean several items at once, you will need longer cleaning (5 or 7 minutes). It is recommended to increase the temperature to **45°C** if the cleaning will be with the addition of some chemical.




5. After setting the appropriate cycle, press the "ON/OFF" button to start cleaning. The appliance will operate according to the selected function. The temperature and time indicator will be lit until the cleaning is complete.



6. When you are done using the device, unplug it from the power supply, open the lid to remove the items. Pour the water out of the tank and then wipe it dry. Wipe the housing and the device from the outside. To turn off the device, hold the "ON/OFF" button for at least 3 seconds.

Instructions for using optional accessories

Tray

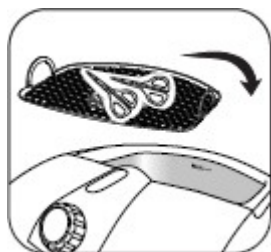

Made of corrosion-resistant plastic.

The tray works best for cleaning small or delicate items. Place items on the tray before you start cleaning, and then insert the tray into the tank.

Intermediate washing



If items need to be washed in a cleaning solution (for example ink containers, or small, heavily soiled objects)

It is recommended to place them in a small container, instead of directly in the tank. The ultrasonic waves will penetrate the container, thereby cleaning the items inside.

PRODUCTS NOT SUITABLE FOR WASHING IN AN ULTRASONIC CLEANER

- Delicate jewelry (pearls, emerald, ivory items, beads, seashells, agate).
- Welded, coated and glued components
- Other things such as wood, coated glass, ceramic products, camera filters.

SECURITY MEASURES

1. The device is a professional equipment for use in beauty parlors. Operation of the device only by qualified cosmetic personnel allows to avoid undesirable consequences during the treatment.
2. Do not disassemble the device or attempt to use it for purposes other than those indicated in this manual. All servicing and repairs must be performed only by an authorized service technician (ACTIVESHOP Ltd. company).
3. Do not install or operate the device near liquids, wet places or with wet hands - so that no liquids get into the device.
4. Immediately remove the plug from the outlet and contact the authorized service provided by ACTIVESHOP Ltd. in the following cases:
 - a) liquid has entered the device, b) the device emits a strange odor, smoke or makes strange sounds, c) the power cord has been damaged, d) the device has been knocked over or its housing has been damaged.
5. Do not put any objects on the cables. Do not install the unit where someone may step on the power cord.
6. For safety purposes, unplug the power cord from the outlet each time you finish working with the device.
7. Do not insert anything into the opening of the device. If a foreign object gets into the hole, remove the cord from the outlet and contact the distributor or manufacturer.
8. Do not place the device on an unstable cart, shelf or vehicle. If dropped, the device may be damaged.
9. In order to guarantee the established useful life of the device, it is recommended to keep an interval of one minute before pressing the power button again (between switching on and off and vice versa).
10. The power supply must comply with the specifications on the nameplate. Otherwise if this happens, there is a risk of malfunction of the device, its damage and even burning.

NOTES:

1. In the event of damage to the power cord or other malfunctions, contact the authorized service - this will help to avoid danger.
2. This equipment may be used by children at least 8 years of age and by persons with impaired physical and mental capabilities and persons with inexperience and lack of familiarity with the equipment, if supervision or instruction is provided regarding the use of the equipment in a safe manner so that the associated risks are understood.
3. The device is not intended for play by children. Do not allow children to play with the device.
4. Do not leave the device unattended when children or persons without sufficient knowledge of how to use the device are in the vicinity.
5. This electrical appliance is not a toy. Improper use or contact with the electrical appliance may pose a health risk or lead to death, so use and store the appliance out of the reach of children.



DISPOSAL OF THE DEVICE

Dispose of used electrical appliances, fixtures and packaging to raw material reprocessing centers in accordance with environmental protection principles. Electrical appliances should not be disposed of in household waste containers. Follow the rules for discarding this type of equipment. In order to protect the environment in accordance with Directive 2012/19/EC on waste electrical and electronic equipment, waste electrical equipment should be collected separately and then transferred to collection centers for waste electronic and electrical equipment.

At the end of their useful life, as well as old appliances contain full-value recyclable components, so they should be handed over for recycling. Therefore, they should be handed over to appropriate collection points, as well as they can also be handed over to ACTIVESHOP Ltd.

STORAGE AND TRANSPORT

The device should be transported at a temperature in the range of (-) 20 °C to (+) 50 °C only in its original packaging. Store the device in a well-ventilated and relative humidity of no more than 75%. Operating temperature from (+) 10 °C to (+) 40 °C. During storage and transportation processes, the device must not be thrown or dropped, exposed to mechanical shocks or atmospheric agents.